



SW1: Rotary type recommended.

SW2: Light Off/Alarm On (default) => Off/Off => On/On => On/Off (return)

Also, Tone preset default switch as follow. Press this key and reset key together, then release reset key first, next this key 1sec. later.

SW3: Reset key

SW4: During pressing PTT key, no other keys can function except reset.

SW5: Preset Tone, Change freq. up.

SW6: Preset Tone, Change freq. down.

01: Low Pass Filter Switch is on at below of 1800Hz

How to check clock freq.(20.0MHz) : Use communication receiver, and read freq. by zero-beat method.

INTELLIGENT CTCSS TONE ENCODER (EMULATOR)

Title	Size	Number	Rev
A4	A4	EMULATOR 00-000-000-00	
Date	2012/06/01	Drawn by T.K.	
Filename	ctcss_pwm.sch	Sheet 1	of 1