

Menu	タブ	項目	設定値
Setup	My Strn	Mode	(*) Sysop
		Callsign	[JXXXXX]
		Password	[*****]
	Server	Name	[Sendai43086T123]
		Location	[Satsuma Sendai43086T123]
		E-mail	[abc@def.jp]
Preferences	Timing	Pref 1:	[asia.echolink.org]
		Pref 2:	[europe.echolink.org]
		Pref 3:	[servers.echolink.org]
	Audio	Pref 4:	[backup.echolink.org]
		Retry TO	[10] sec
		Proxy	(*) Direct Connect (No Proxy)
	Perform	Conn attempt	[60] sec
		Transmit TL	[150] sec
		Receive TL	[0] sec
	Signals	InactivityTO	[0] sec
		Receive Hang	[1200] msec
		SoundCardTuning	[0] Recording Mode [No Recording]
Sysop Setup	List	Update Station List Automatic	[L] Update Station List Automatic
		Update Every	[300] sec [L] Even While Connected
		Free [Sendai43086T123]	
	Conne	Busy [Sendai43086T123]	
		[L] Show name of connected conference	
		PTT Control...	
	Security	[L] Keyboard Key	[] Momentary
		[Right Ctrl Key]	[] System-Wide
		[] Serial Port CTS	
	Signals	[] Middle Mouse Button	[] Auto-Select Mic Input
		[] Show Alart when "Doubling"	
		初期設定のまま	
Sysop Setup	RX Ctrl	Carrier Detect	
		() Manual	VOX Delay (ms) : [1200]
		(*) VOX	Anti-Thump (ms): [500]
	TX Ctrl	() Serial CD	ClrFreq Delay (ms) :[3000]
		() Serial CTS	
		() Serial DSR	Serial Port : [COM _]
	DTMF	[L] Squelch Crash Anti-Trip	[] Invert Sense
		Duration (ms) : [500]	
		PTT Activation	
	Ident	() External VOX	
		() ASCII Serial	Serial Port [COM _]
		(*) RTS	
Sysop Setup	Options	() DTR	
		[] Key PTT On Local Transmit	
		DTMF Decoder	Min Interdigit Time (ms) [0]
	Signals	() External	[L] Log All Commands
		(*) Internal	[L] Auto Mute
		() Disabled	[] Disable During PTT
	Remt	[] Enable Remote Pad	
		[] Dead-Key Prefix:	
		Station Identification	
	RF Info	() Morse	
		(*) Spoken Voice	
		() External file:	
Sysop Setup	Ident	Identify:	
		[] Each Time Station connects	
		[] Each Time Station disconnects	
	Options	[] At end of transmission	every [-] min
		[] While active	every [-] min
		[L] While not active	every [10] min
	Signals	[L] Wait for clear frequency	
		Announce connects:	[First conference only]
		[L] Include callsign	
Sysop Setup	Options	Announce disconnects:	[Last conference only]
		[L] Include callsign	
		Announce muting:	[Mute if freq is busy]
	Signals	[] Play welcome message to connecting station	
		[] Play courtesy tone	
		[] Play activity reminder every	sec
	Remt	Max key-down time (sec)	: [0]
		Dead-carrier timeout (sec)	: [0]
		Announcement pre-delay (ms)	: [250]
Sysop Setup	Options	Event	(*) Default
		() Custom:	
		Speech Speed	[Normal]
	Signals	Tone Burst	[Never]
		[L] Enable Web remote control	
		TCP Port	[8080]
	Remt	Username	[JXXXXX]
		Password	[*****]
		Lat : [36] [12.75] [North]	Freq (MHz) : [430.86]
Sysop Setup	RF Info	Lon : [139] [59.99] [East]	PL (Hz) : [123.0]
		Power (W) : [3]	Antenna Gain (dB) : [7]
		HAAT (ft) : [15]	Directivity : [Omni]
	Options	[] Report Status via APRS	
		*** Tea Break ***	
		Echolinkの運用中に、ルーターの再起動をした時に、PCのIPアドレスが変わってしまう事で、「ルーターのポート開放」がはずされて、音無しなどの不具合が発生してしまいます。この回避策として以下のようにルーターのIPアドレス割り振りをしてください。	
	Signals	ルーターへのログインはWebブラウザでのURL入力から始めます。	
		•EcholinkPCはIPアドレス自動取得にする。(通常、初期設定されてるので何もしないでよい)	
		•ルーターの詳細設定画面で、EcholinkPCのIPアドレスを指定割り当てにする。ルーターにより設定画面は様々だが、50以上が多い。	
Sysop Setup	Options	例) 192.168.10.51	
		•Echolink用ポート開放設定する。(指定したIPアドレスに番号を設定)	
		5198 UDP (両方向)	
	Signals	5199 UDP (両方向)	
		5200 TCP (両方向)	
	Options		
	Signals		

*** Tea Break ***

Echolinkの運用中に、ルーターの再起動をした時に、PCのIPアドレスが変わってしまう事で、「ルーターのポート開放」がはずされて、音無しなどの不具合が発生してしまいます。この回避策として以下のようにルーターのIPアドレス割り振りをしてください。

ルーターへのログインはWebブラウザでのURL入力から始めます。

•EcholinkPCはIPアドレス自動取得にする。(通常、初期設定されてるので何もしないでよい)

•ルーターの詳細設定画面で、EcholinkPCのIPアドレスを指定割り当てにする。ルーターにより設定画面は様々だが、50以上が多い。

例) 192.168.10.51

•Echolink用ポート開放設定する。(指定したIPアドレスに番号を設定)

5198 UDP (両方向)

5199 UDP (両方向)

5200 TCP (両方向)